Ruijie Cybrey RG-ANT90-T2 Antenna

Installation Guide

Document Version: V1.0
Date: 2026-09-30
Copyright © 2026 Ruijie Networks

Copyright

Copyright © 2026 Ruijie Networks

All rights are reserved in this document and this statement.

Without the prior written consent of Ruijie Networks, no organization or individual is permitted to reproduce, extract, back up, modify, or distribute the content of this document in any manner or form. It is also prohibited to translate the document into other languages or use any or all parts of it for commercial purposes.




and other Ruijie trademarks are owned by Ruijie Networks.

All other trademarks or registered trademarks mentioned in this document are owned by their respective owners.

Disclaimer

The products, services, or features that you purchase are subject to commercial contracts and terms. It is possible that some or all of the products, services, or features described in this document may not be available for purchase or use. Unless agreed upon otherwise in the contract, Ruijie Networks does not provide any explicit or implicit statements or warranties regarding the content of this document.

The names, links, descriptions, screenshots, and any other information regarding third-party software mentioned in this document are provided for your reference only. Ruijie Networks does not explicitly or implicitly endorse or recommend the use of any third-party software and does not make any assurances or guarantees concerning the applicability, security, or legality of such software. You should choose and use third-party software based on your business requirements and obtain proper authorization. Ruijie Networks assumes no liability for any risks or damages arising from your use of third-party software.

The content of this document is subject to constant change due to product version upgrades or other reasons. Thus, Ruijie Networks reserves the right to modify the content of the document without prior notice or prompt.

This manual serves solely as a user guide. While Ruijie Networks endeavors to ensure the accuracy and reliability of the content when compiling this manual, it does not guarantee that the content of the manual is free of errors or omissions. All information contained in this manual does not constitute any explicit or implicit warranties.

Personal Data Statement

During the operation or troubleshooting of the products, services, or features you have purchased, certain personal data of users may be collected or used. Therefore, it is essential for you to establish and implement appropriate privacy policies, in compliance with the relevant laws and regulations of the applicable countries or regions, to ensure the complete protection of users' personal data.

If Ruijie Networks is involved in this process, we will strictly adhere to the relevant laws and regulations of the applicable countries or regions and take all necessary actions to safeguard users' personal data.

When discarding, reclaiming, or reusing a device, please ensure to back up or clear any stored data to avoid data leakage. For assistance, please contact our after-sales technical support.

Preface

Intended Audience

This document is intended for:

- Network engineers
- Technical support and servicing engineers
- Network administrators

Technical Support

- Ruijie Networks website: https://www.ruijie.com/
- Online support center: https://www.ruijie.com/support
- Case portal: https://caseportal.ruijie.com
- Community: https://community.ruijie.com/
- Email support: service_rj@ruijie.com
- Live chat: https://www.ruijie.com/rita
- Documentation feedback: doc@ruijie.com.cn

Conventions

1. Signs

The signs used in this document are described as follows:

Danger

An alert that calls attention to safety operation instructions that if not understood or followed when operating the device can result in physical injury.

Warning

An alert that calls attention to important rules and information that if not understood or followed can result in data loss or equipment damage.

Caution

An alert that calls attention to essential information that if not understood or followed can result in function failure or performance degradation.

Note

An alert that contains additional or supplementary information that if not understood or followed will not lead to serious consequences.

Specification

An alert that contains a description of product or version support.

2. Note

This document provides the installation steps, troubleshooting, technical specifications, as well as the specifications and use guidelines of cables and connectors. It is intended for users who want to understand the above contents, and are familiar with the installation and maintenance of networking hardware. Users are assumed to have reasonable knowledge of relevant terms and concepts.

Content

Preface.....I

1 Overview.....2

1.1 About the RG-ANT90-T2.....2

1.2 Equipment Appearance.....2

1.3 Technical Specifications.....3

2 Preparing for Installation.....5

2.1 Package Contents.....5

2.2 Safety Guidelines.....5

2.2.1 General Precautions.....6

2.2.2 Chassis-Lifting Guideline.....6

2.2.3 Electrical Safety.....6

2.3 Site Requirements.....6

2.4 Tools.....7

2.5 Checking Before Installation.....7

3 Installing the Equipment.....8

3.1 Installation Procedure.....8

3.2 Before You Begin.....8

3.3 Installing the Antenna.....9

3.3.1 Wall Mount.....9

3.3.2 Pole Mount.....11

3.4 Connecting Cables.....13

1 Overview

1.1 About the RG-ANT90-T2

The RG-ANT90-T2 is a tri-band, dual-polarized, high-gain antenna. In 6 GHz, the antenna features a 65° azimuth beamwidth, a 18° elevation beamwidth, and a peak gain of 11 dBi; in 5 GHz, the antenna features a 65° azimuth beamwidth, a 18° elevation beamwidth, and a peak gain of 11 dBi; in 2.4 GHz, the antenna features a 60° azimuth beamwidth, a 20° elevation beamwidth, and a peak gain of 9 dBi. The antenna is ideal for indoor and outdoor sector coverage and supports Wi-Fi access in the 2.4 GHz, 5 GHz, or 6 GHz bands. The RG-ANT90-T2 is equipped with brackets that support both horizontal and vertical adjustment, enabling flexible deployment. It can be directly connected to an AP with an RP-SMA port.

1.2 Equipment Appearance

Figure 1-1 Appearance



Note

Figure 1-1 is for reference only. The actual equipment may vary.

1.3 Technical Specifications

Note

The weight in the table refers to the weight of a single antenna.

Table 1-1 Technical Specifications

Dimensions (W x D x H)	240 mm x 240 mm x 41.5 mm (9.45 in. x 9.45 in. x 1.63 in.)
Weight	0.615 kg (1.36 lbs)
Frequency Range	● 2400–2500 MHz ● 5150–6425 MHz ● 6425–7125 MHz
Gain	● 2400–2500 MHz: 9 dBi ● 5150–6425 MHz: 11 dBi ● 6425–7125 MHz: 11 dBi
HPOL Beamwidth (3dB)	● 2400–2500 MHz: 65° ± 10° ● 5150–6425 MHz: 65° ± 10° ● 6425–7125 MHz: 60° ± 10°
VPOL Beamwidth (3dB)	● 2400–2500 MHz: 27° ± 5° ● 5150–6425 MHz: 15° ± 5° ● 6425–7125 MHz: 15° ± 5°
HPOL Beamwidth (6dB)	● 2400–2500 MHz: 95° ± 5° ● 5150–6425 MHz: 95° ± 10° ● 6425–7125 MHz: 90° ± 15°
VPOL Beamwidth (6dB)	● 2400–2500 MHz: 37° ± 5° ● 5150–6425 MHz: 20° ± 5° ● 6425–7125 MHz: 17° ± 5°
Min. Antenna Efficiency	● 2400–2500 MHz: 60% ● 5150–6425 MHz: 50% ● 6425–7125 MHz: 50%
Port Isolation	● 2400–2500 MHz: ○ Co-channel: 20 dB ○ Adjacent-channel: 25 dB ● 5150–6425 MHz: ○ Co-channel: 15 dB ○ Adjacent-channel: 25 dB ● 6425–7125 MHz: ○ Co-channel: 15 dB ○ Adjacent-channel: 25 dB
Max. Input Power	1 W

Max. VSWR	• 2400–2500 MHz: < 2 • 5150–6425 MHz: < 2 • 6425–7125 MHz: < 2.5
Environment	Operating temperature: –40°C to 65°C (–40°F to 149°F)
	Operating humidity: 0% RH to 100% RH (non-condensing)
	Storage temperature: –40°C to 85°C (–40°F to 185°F)
	Storage humidity: 0% RH to 100% RH (non-condensing)
Mounting Options	Wall, pole
Input Port	2 x RP-SMA-Female
IP Rating	IP55
Certification	CE
MTBF	Greater than 400,000 hours

2 Preparing for Installation

2.1 Package Contents

Table 2-1 Package Contents

Item	Quantity
RG-ANT90-T2 antenna (with mounting bracket assembly)	1
Pivot bracket	1
Base bracket	1
Antenna mounting bracket	1
Hose clamp	2
Wing knob	2
Positioning nut	1
M5 x 66 mm Phillips hexhead machine screw	2
M6 x 70 mm expansion anchor	2
M5 x 12 mm Phillips pan head screw	3
User Manual	1
Warranty Card	1

Note

The package contents are subject to the purchase contract, and actual delivery may vary. Please check the items carefully against the package contents or purchase contract. If you have any questions, please contact the distributor.

2.2 Safety Guidelines

Note

- To avoid personal injury or equipment damage, review the safety guidelines in this chapter before you begin the installation.

- The following safety guidelines may not include all the potentially hazardous situations.

2.2.1 General Precautions

- Do not expose the equipment to high temperatures, dust, or harmful gases. Do not install the equipment in flammable or explosive environments. Keep the equipment away from sources of electromagnetic interference (EMI), such as large radar stations, radio stations, and substations. Do not subject the equipment to unstable voltage, vibration, or excessive noise.
- The installation site should be dry. Do not install the equipment in a place near the sea. Keep the equipment at least 500 m (1,640.42 ft.) away from the ocean and do not face it towards the sea breeze.
- The installation site should be free from water flooding, seepage, dripping, or condensation. The installation site should be selected according to network planning and communications equipment features, and considerations such as climate, hydrology, geology, earthquake, electrical power, and transportation.
- The antenna equipment must be installed by professional operators.

Caution

Please follow the correct procedures described in this guide to install and remove the equipment.

2.2.2 Chassis-Lifting Guideline

- Avoid moving the equipment frequently.
- Turn off all power supplies and disconnect all cables before lifting or moving the equipment.

2.2.3 Electrical Safety

Warning

- Any deviation from standard or improper electrical operations can result in accidents such as fires or electric shocks, potentially causing severe or even fatal harm to both individuals and equipment.
- Direct or indirect touch through a wet object on high-voltage and mains supply can bring a fatal danger.

- Always observe the local regulations and standards. Only qualified personnel should be allowed to operate the equipment.
- Carefully check the work area for potential hazards, including ungrounded power system, absent safety grounds, and damp floors.

2.3 Site Requirements

To ensure the normal operation and prolonged service life of the equipment, it is essential to install it on a site that is sturdy enough to support the equipment and its accessories.

2.4 Tools

Table 2-2 Tools

Common Tools	Marker, Phillips screwdriver, hammer drill

Note

The equipment is delivered without a toolkit. Prepare the preceding tools by yourself.

2.5 Checking Before Installation


After unpacking the equipment, carefully inspect each item in accordance with the provided package contents. If any inconsistencies are found, please contact your local distributor.

3 Installing the Equipment

Caution

Before installing the equipment, ensure that guidelines and requirements in Chapter 2 have been met.

3.1 Installation Procedure

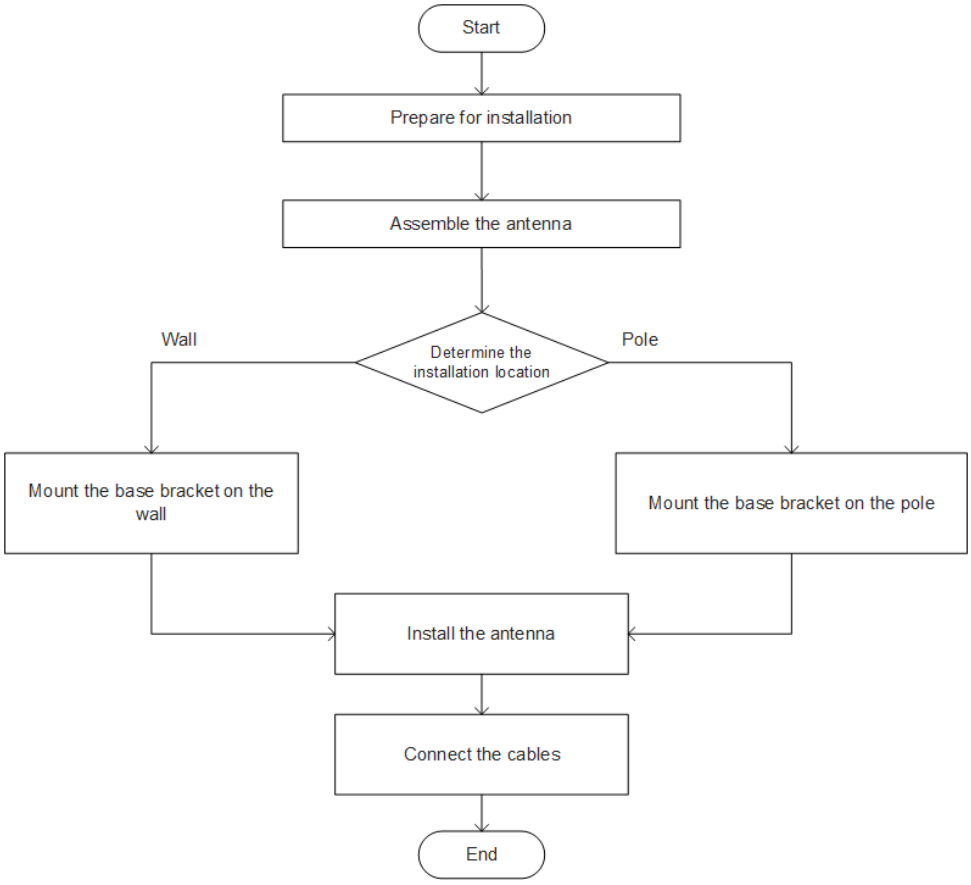

3.2 Before You Begin

Carefully plan and arrange the installation location, and cabling of the equipment before installation. Confirm the following points before installation:

- The installation site meets the temperature and humidity requirements.
- The installation site meets all requirements described in this guide.
- The equipment meets the customers' requirements.

3.3 Installing the Antenna


Caution

- Install and orient the equipment to maximize coverage.
- The schematic diagrams provided are for reference only. The actual equipment should be installed according to its physical specifications and design.

3.3.1 Wall Mount


(1) Assemble the antenna.

a. Secure the antenna mounting bracket to the antenna using three screws.

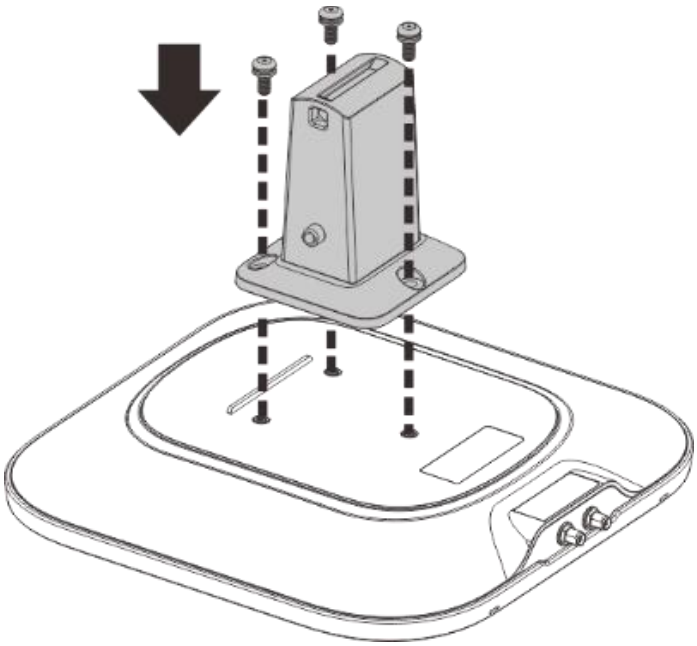


b. Secure the pivot bracket to the antenna mounting bracket using a long screw and a nut, and then install the wing knob.

①

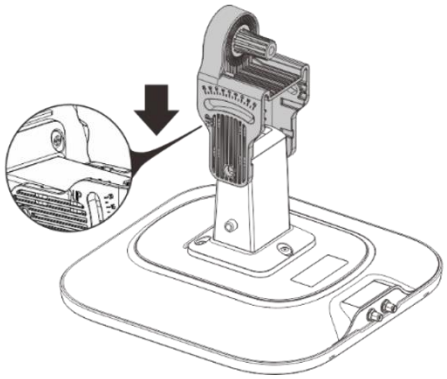

②

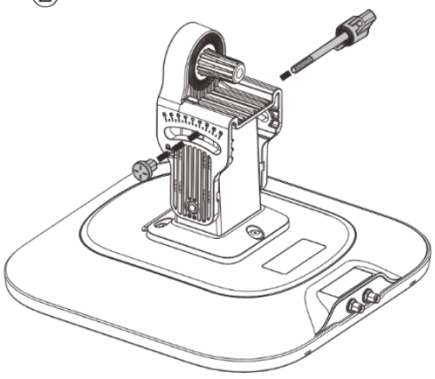


Note


Make sure the UP arrow points upward.

(2) Install the base bracket.


a. Drill two holes with a spacing of 56.1 mm (2.21 in.) in the wall, and secure the base bracket to the wall using two expansion anchors.

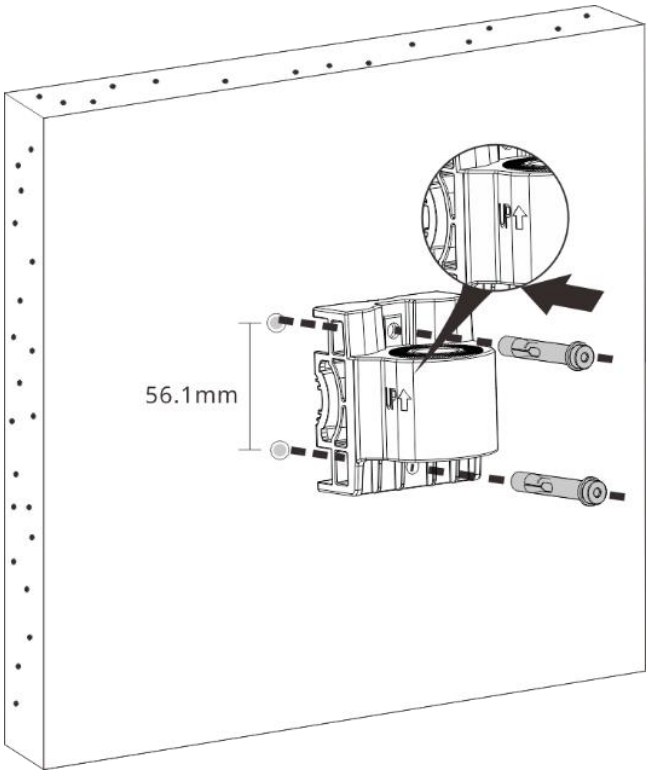

(3) Install the antenna assembly prepared in Step 1 onto the base bracket and tighten the long screw.

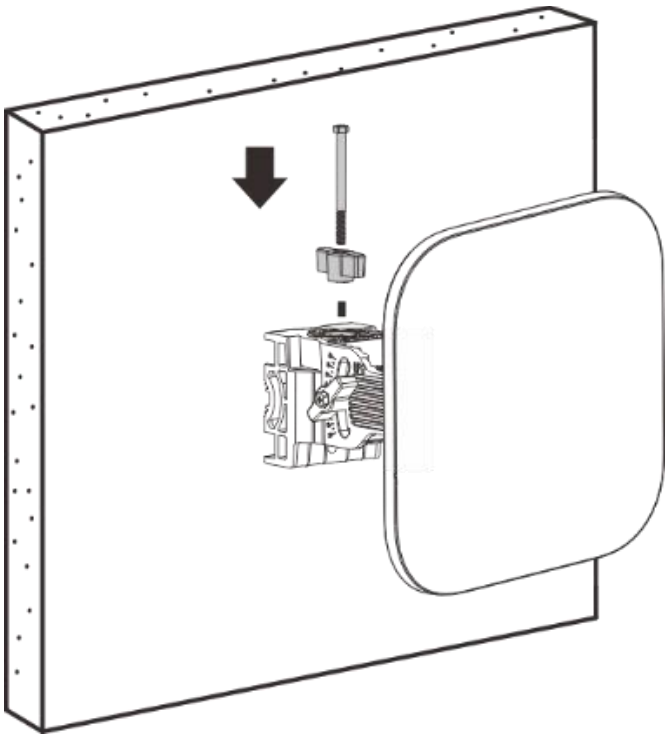


After installation, the antenna angle can be adjusted by rotating the wing knobs on the top and side.

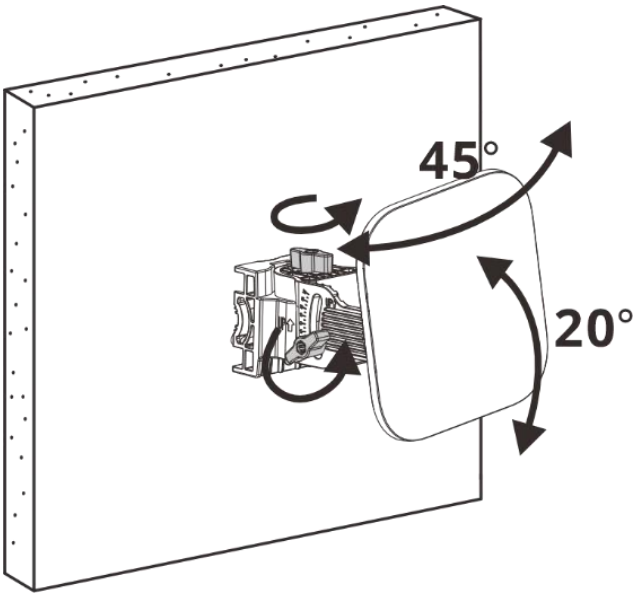


3.3.2 Pole Mount

(1) Assemble the antenna.

a. Secure the antenna mounting bracket to the antenna using three screws.

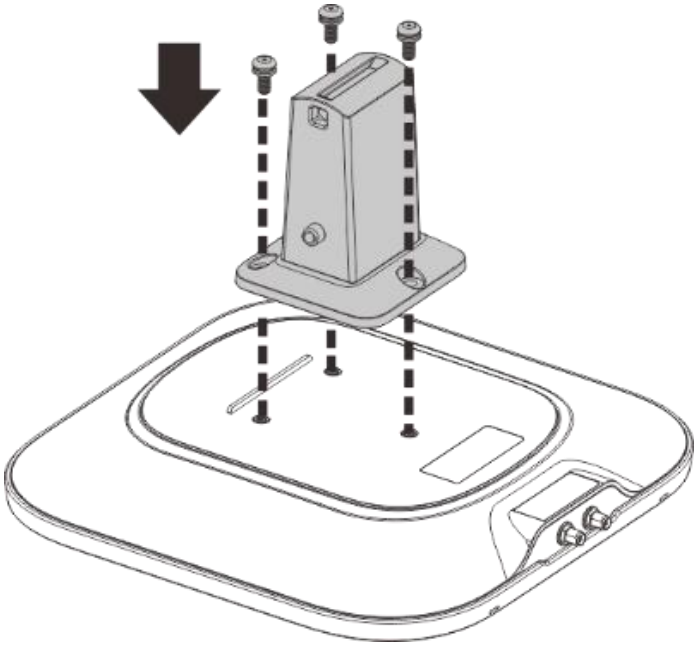

b. Secure the pivot bracket to the antenna mounting bracket using a long screw and a nut, and then install the wing knob.

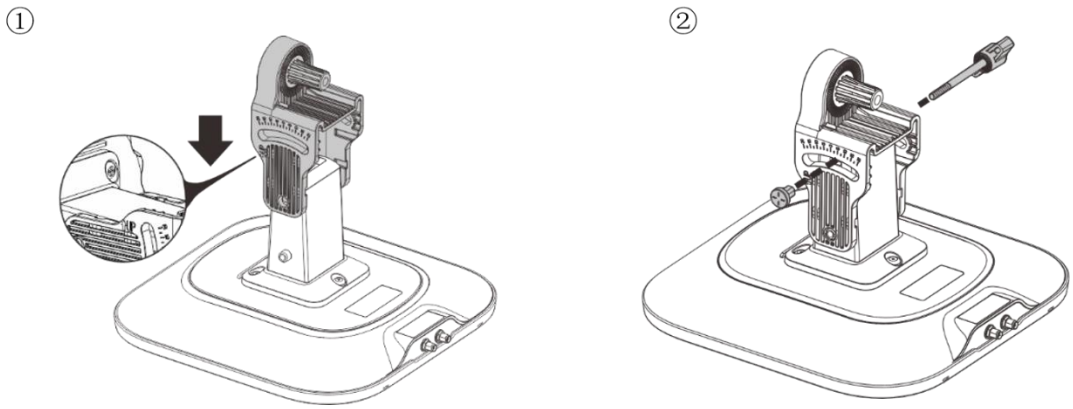

Note


Make sure the UP arrow points upward.

(2) Install the base bracket.


Secure the base bracket to the pole with two hose clamps and tighten them.

Note


Make sure the UP arrow points upward.

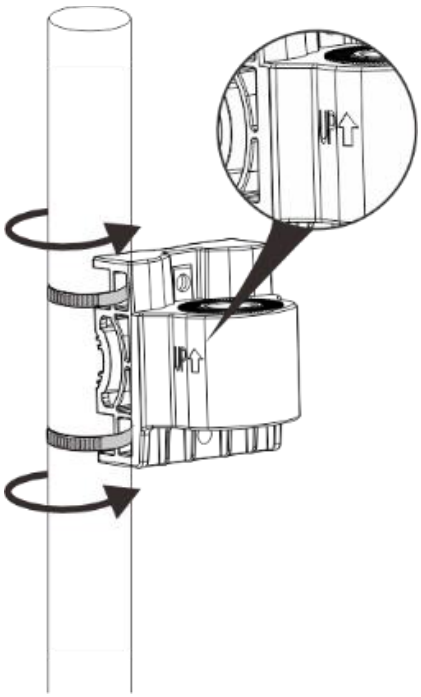

(3) Install the antenna assembly prepared in Step 1 onto the base bracket and tighten the long screw.

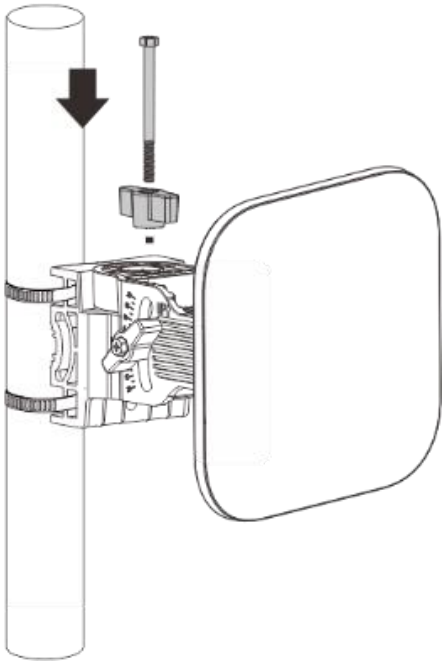

After installation, the antenna angle can be adjusted by rotating the wing knobs on the top and side.

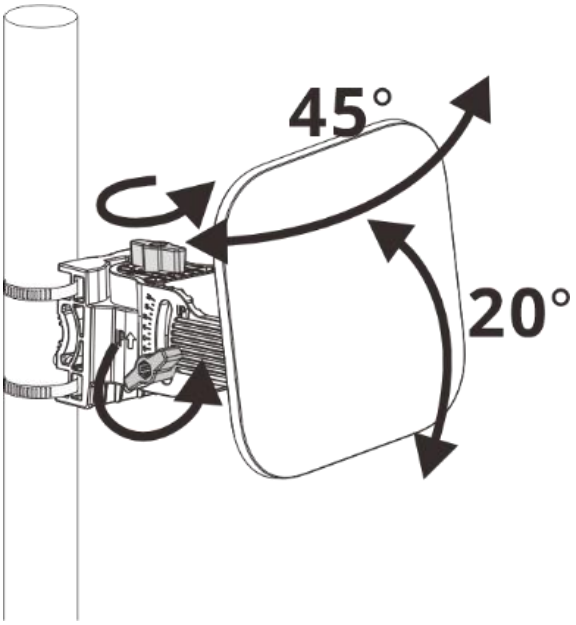


3.4 Connecting Cables

(1) Connect one end of the feeder cable to the RPSMA-K port on the antenna.

(2) Connect the other end of the feeder cable to the RPSMA-K port on the AP.

Figure 3-1 Cable Connection

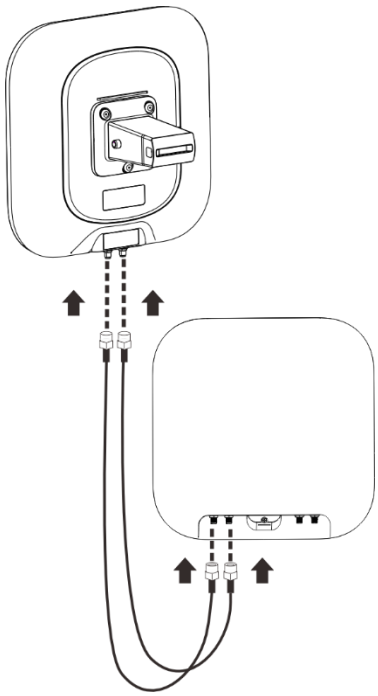

(3) (Optional) To enhance the waterproof performance of the RP-SMA-J port, wrap waterproof tape around the port.