NETKEY
NETWORK COMPONENTS
CONTRACTOR GRADE

NetKey Keystone Solder Type AV Modules


Part Numbers: NKRSMB**Y, NKRSMR**Y, NK35MSS**


© Panduit Corp. 2014

INSTALLATION INSTRUCTIONS **NK397C**

RCA Modules

(NKRSMB**Y, NKRSMR**Y)

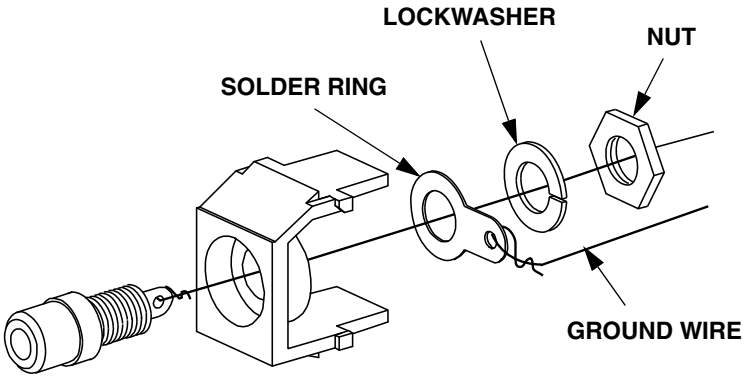

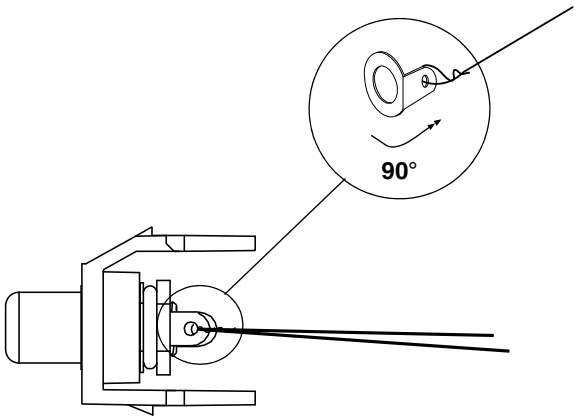

STEP ONE

A. SLIDE SOLDER RING, LOCKWASHER, AND NUT ONTO SIGNAL WIRE.

B. PULL SIGNAL WIRE THROUGH MODULE.

C. LOOP WIRE THROUGH HOLE IN RCA AND TWIST.

D. SOLDER WIRE TO BACK OF RCA.

STEP TWO

A. ASSEMBLE SOLDER RING, LOCKWASHER, AND NUT TO RCA-MODULE SUBASSEMBLY.

B. LOOP GROUND WIRE THROUGH SMALL HOLE IN SOLDER RING AND TWIST.

C. SOLDER GROUND WIRE TO SOLDER RING.

STEP THREE

A. BEND SOLDER RING TAB 90°.

3.5mm(1/8") Stereo Modules

(NK35MSS**)


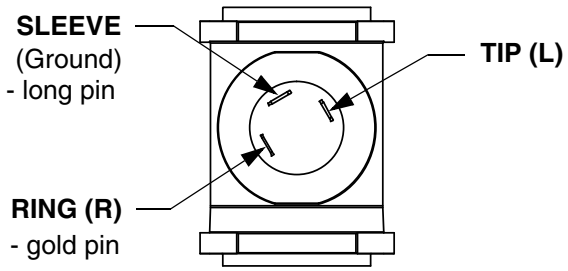


Fig. 1

A. REFER TO FIG. 1 FOR WIRE PLACEMENT.

B. SOLDER WIRES TO CORRECT TABS ON THE BACK OF CONNECTOR.

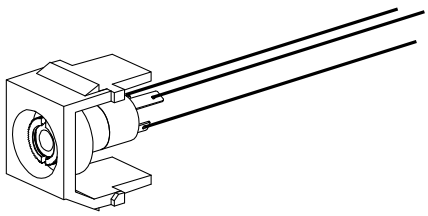

For Instructions in Local Languages and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT
www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654